


Ecophon Akusto Wall C with Thinline

Horizontal installation 2700x600

M303

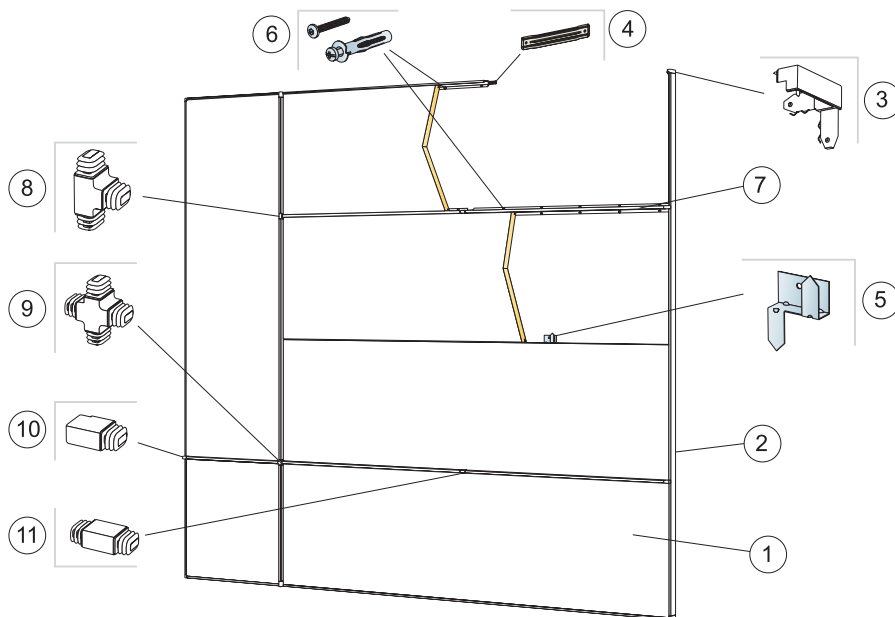

1. Ecophon Akusto Wall C.

2. Connect Thinline profile.

3. Connect Thinline corner.

4. Connect Thinline splice.

5. Connect Thinline ending.

6. Installation screw, installed
at 200 mm centres (select fastener
according to wall material).



7. Connect Structure profile.

8. Connect Structure T-junction.

9. Connect Structure X-junction.

10. Connect Structure ending.

11. Connect Structure I-junction.















A SOUND EFFECT ON PEOPLE



www.ecophon.com

1

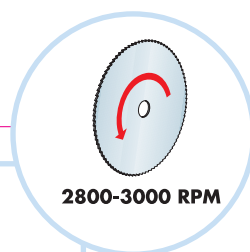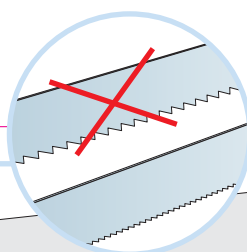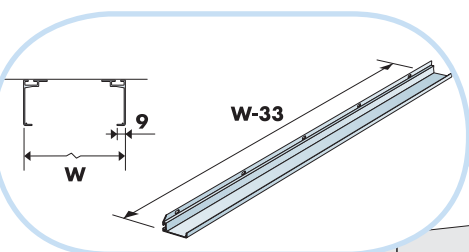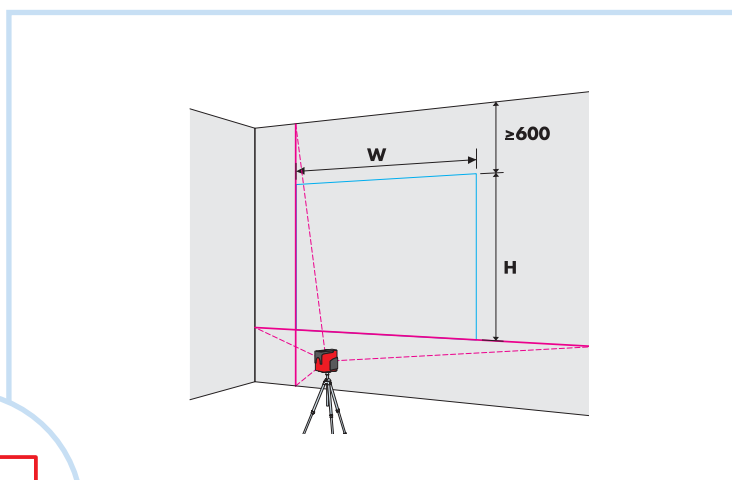


2

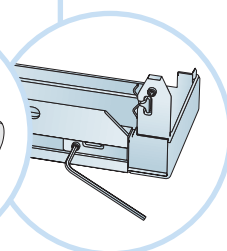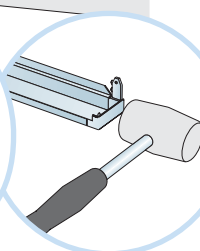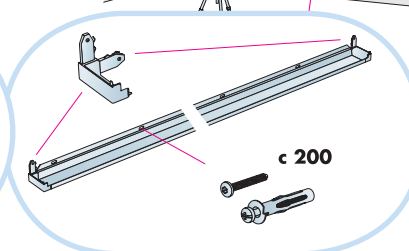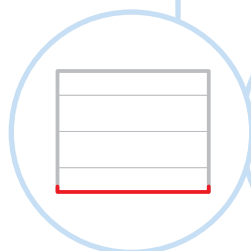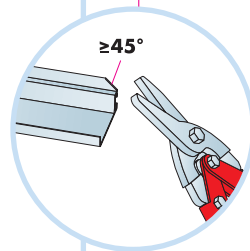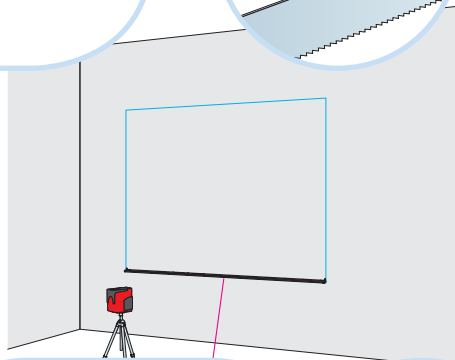

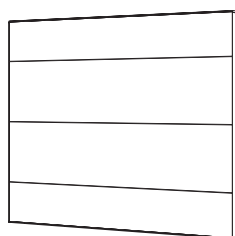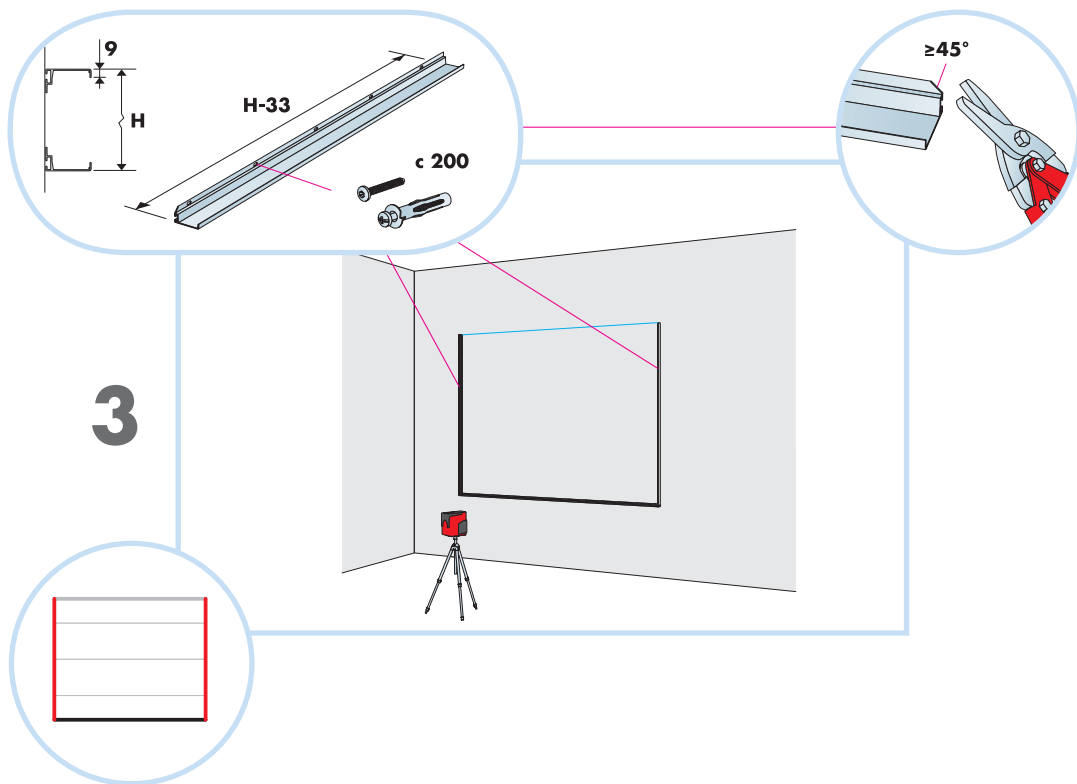


→ 4



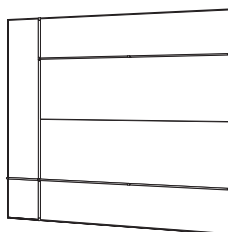


→ 8


4

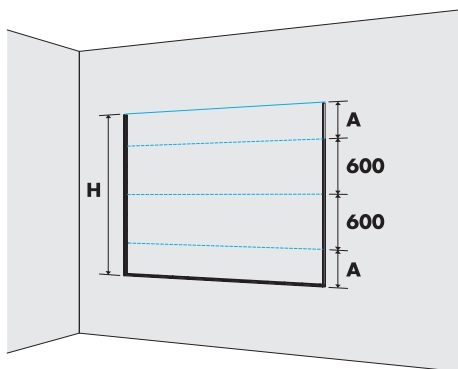



$$H = 2A + nx600$$

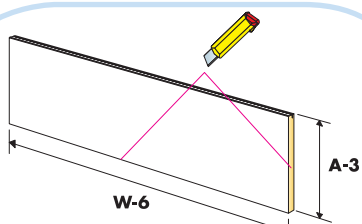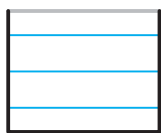
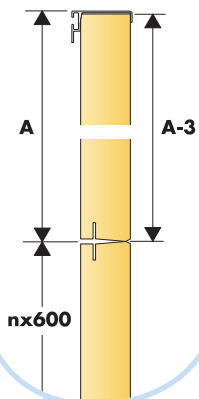


c 1000






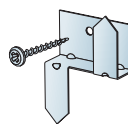


5

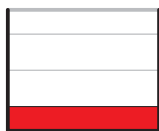
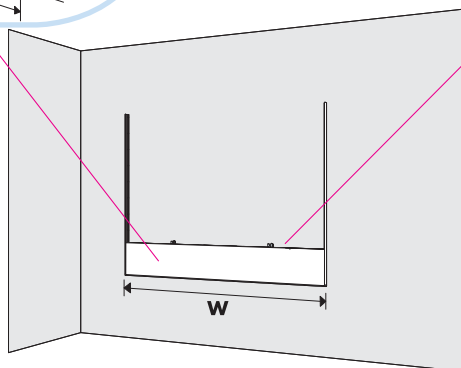


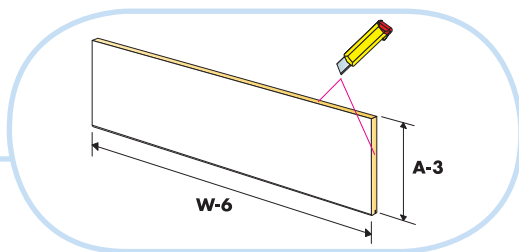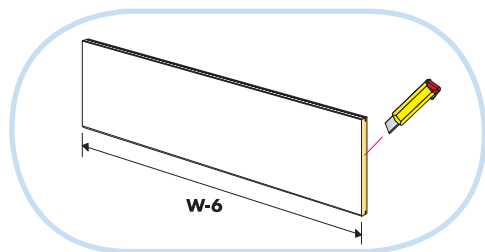





6

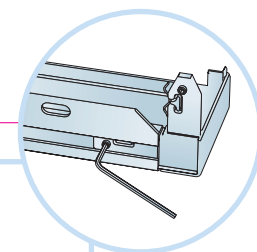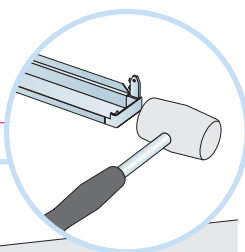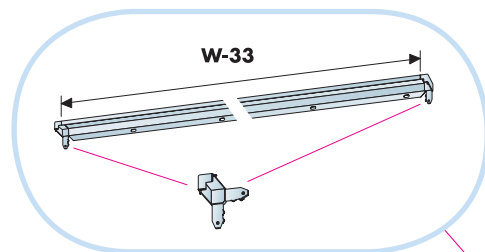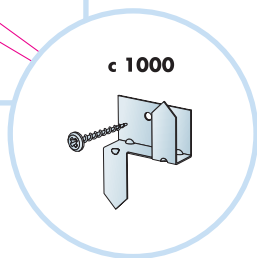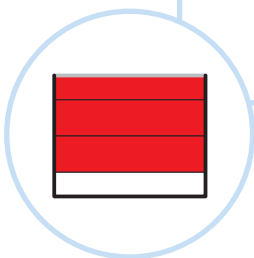
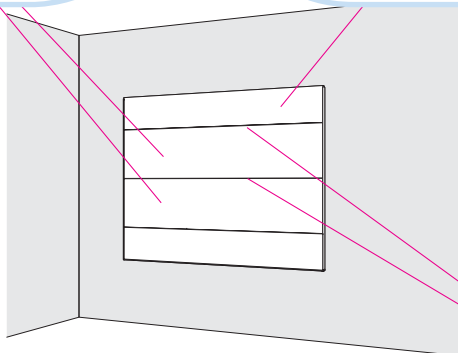


7




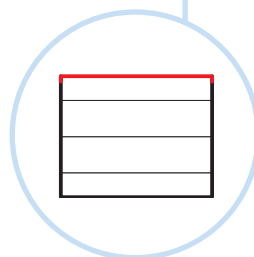
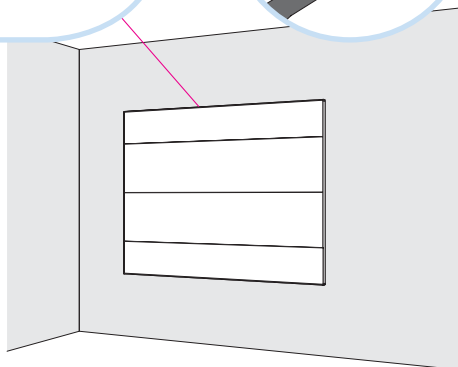


H/W > 2700

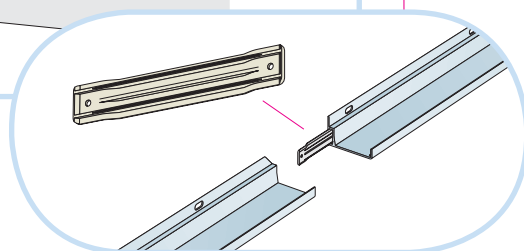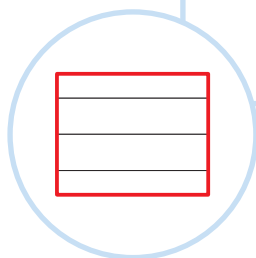
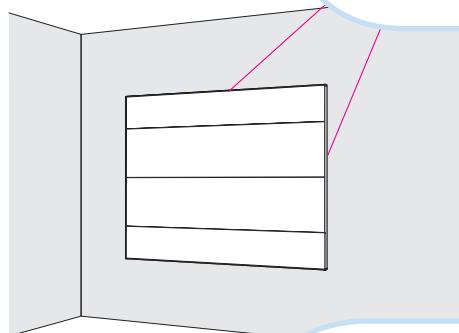
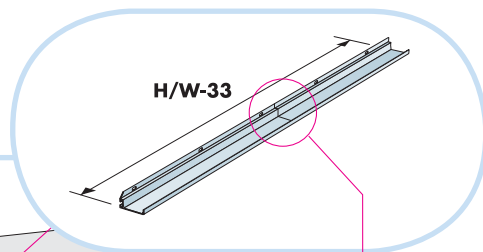


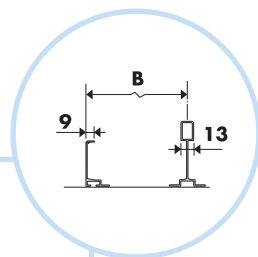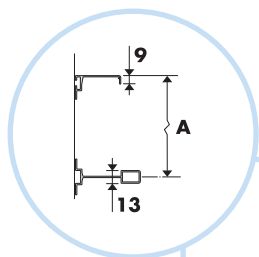










8

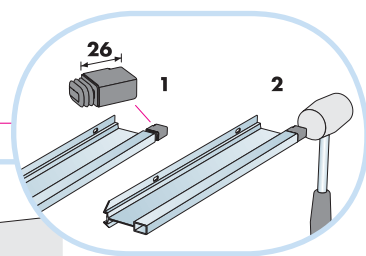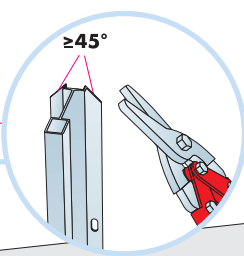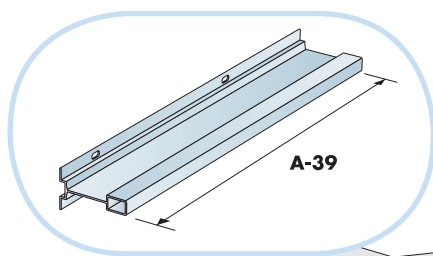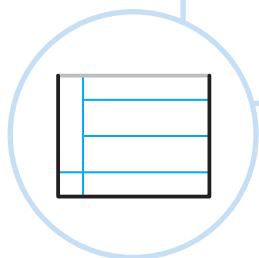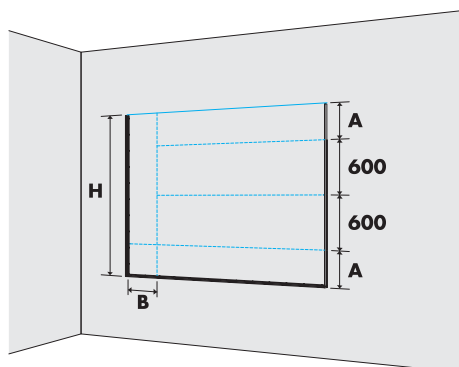



9

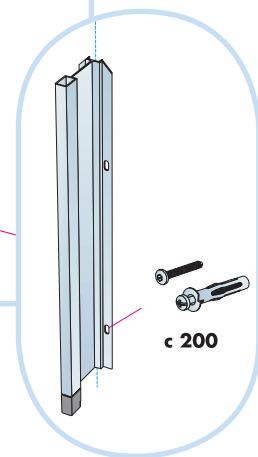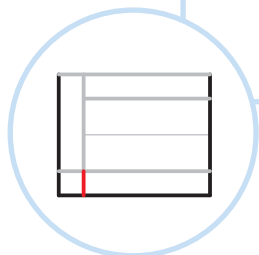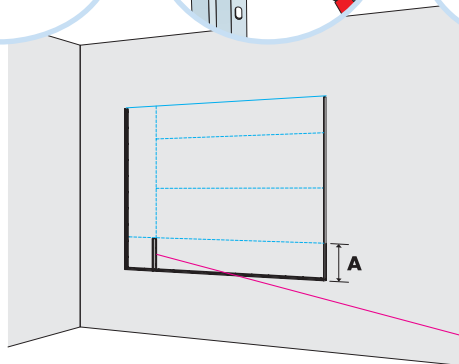






10

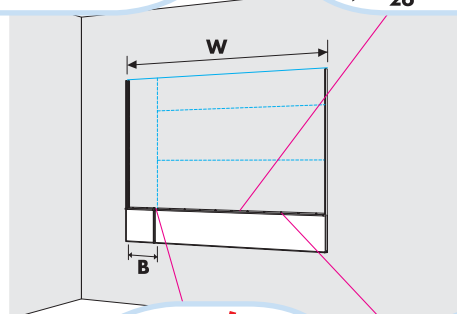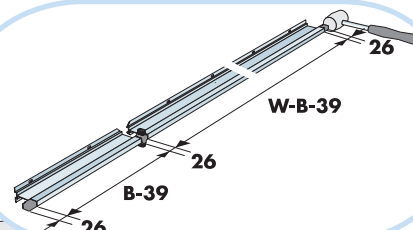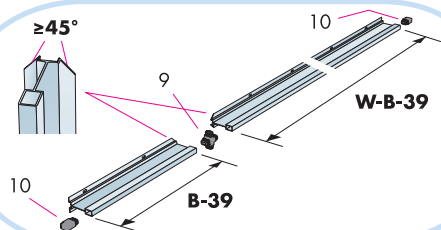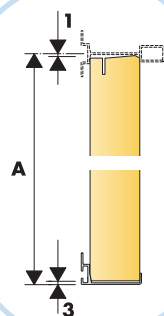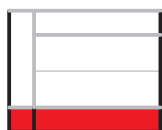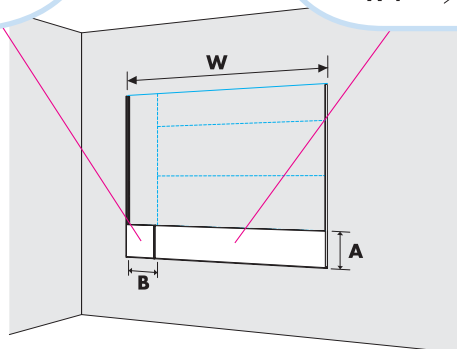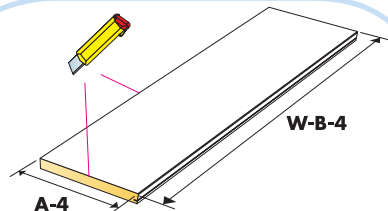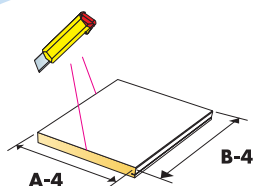





11

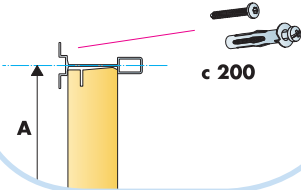
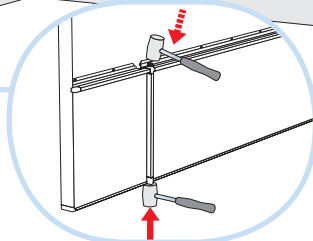


12

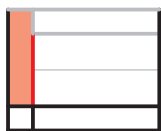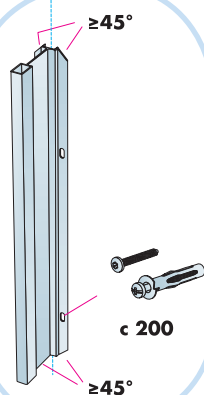
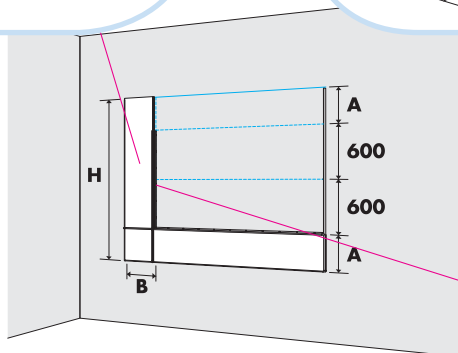
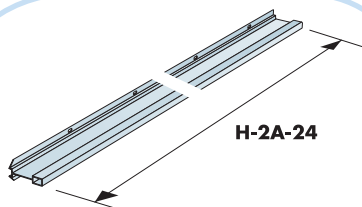
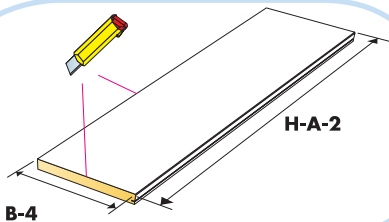


13

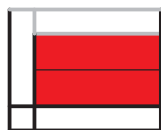
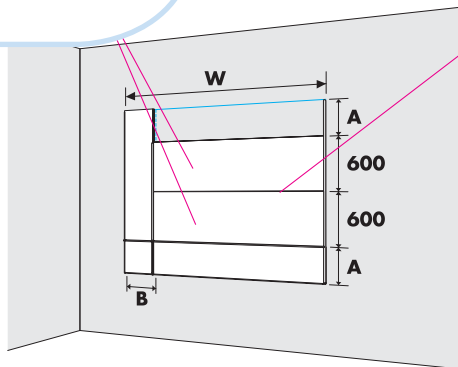
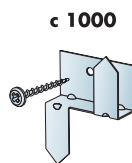
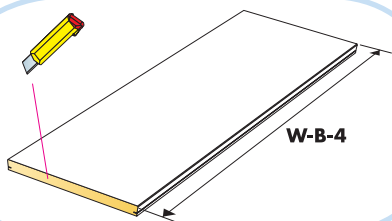


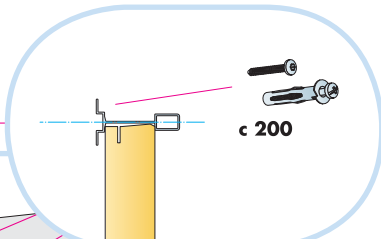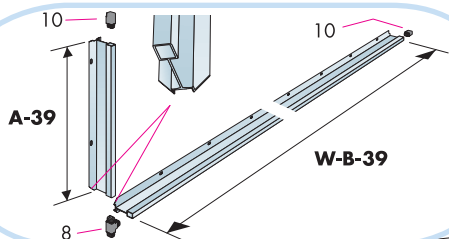


14

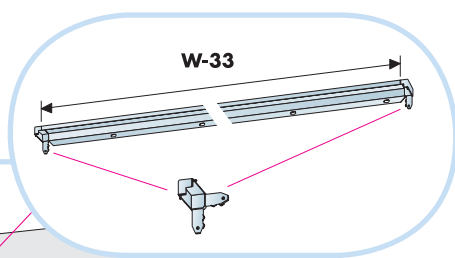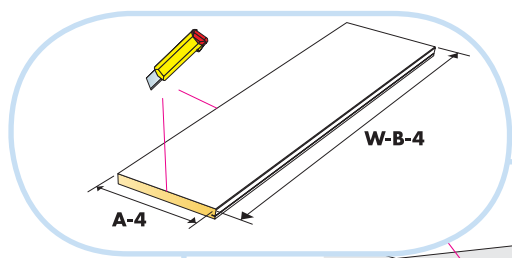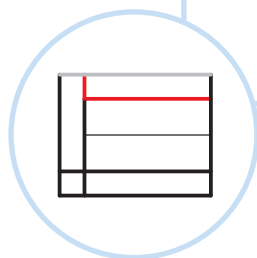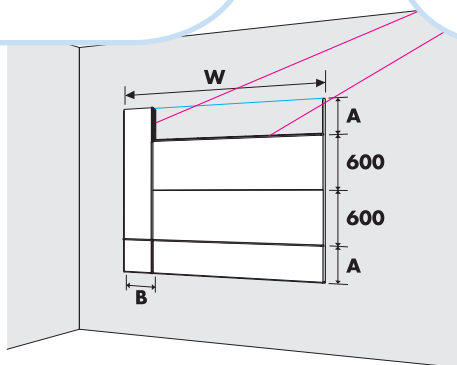

15

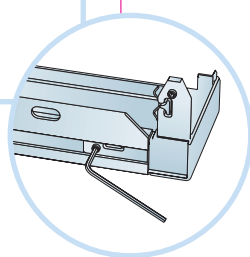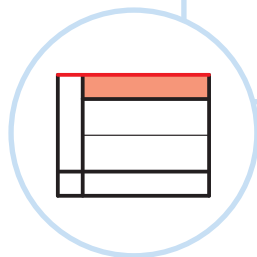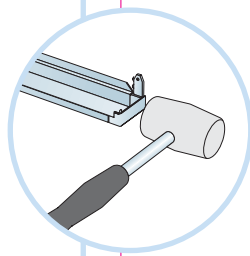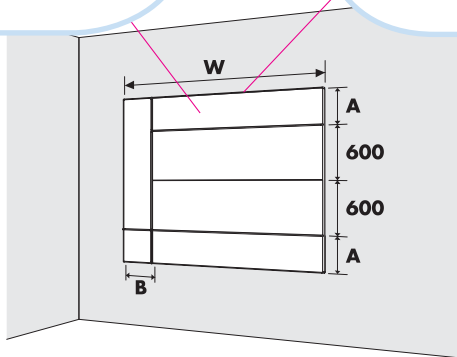

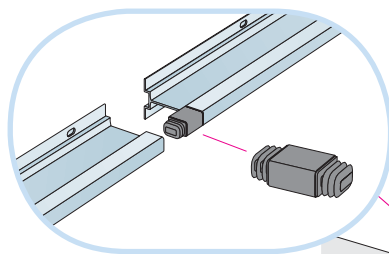

H/W > 2700

